Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

Product Series: Product Type: Housing Material: Diaphragm Material: Inlet: **Outlet:** Max Operating Temp: 238.00°F / 114.45°C Min Operating Temp: -30.00°F / -34.44°C **Product SKU:**


MPV Inline Check Valve 30% Glass Fill Nylon 0.030" Fluorosilicone Natural Nylon 30% Glass Fill 22HSP Black Nylon 30% Glass Fill 22HSP 000050502

Physical Properties

Size and Weight: 1.565 Long 0.765 Wide, 3.34g Max Operating Tensile Stress: 50 lbs Max Allowable Leak Rate: 0.009 cm^3/sec @ 65 psi (air) Max Operating Pressure: 65 psi (air) 0.0 psi (Normally Open) Cracking Pressure: Required Sealing Back Pressure: Less than 0.1 psi (air)

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greelev, CO 80631

Flow Rate (Gpm) vs. Test Pressure (Psi)

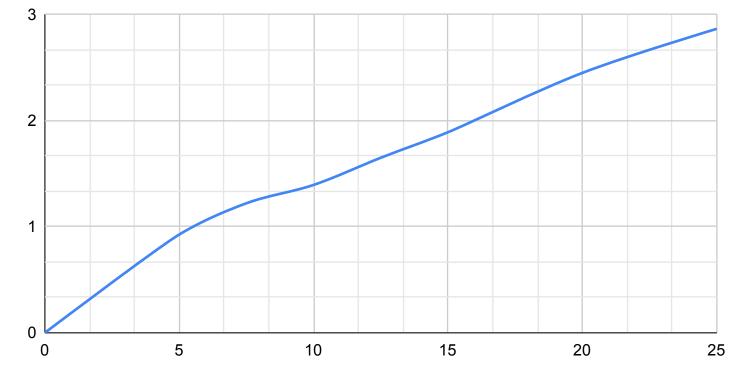

Test Pressure (psi)

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

Flow Rate (gpm)

Chemical Compatibility Information

Inline diagphram type check valves, all types of filters, self-sealing check valves, ball type check valves, and spring loaded check valves are all products that can, and typically do, contain multiple types of different materials. The chemical compatibility of the whole product is limited to those chemicals which are compatible with all of the materials present in the product. Pneuline has compiled an extensive list of various chemical compatibility ratings for the different materials that we use to manufacture our products, and have provided a list of chemical compatibility ratings for each specific product based on the materials used in that product.

The rating system is as follows:

- **A = Excellent** -- The product is fully compatible with the chemical and is recommended for continuous use within the normal operating parameters of the product (temprature, pressure, etc).
- **B** = **Adequate** -- The chemical causes a minor effect to the product, slight corrosion or discoloration, minor loss in performance or slightly shortened operating lifespan.
- **C** = **Not Ideal** -- The chemical has a pronounced effect on the product and will degrade it. Material softening, swelling, loss of strength, corrosion, and discoloration may occur. Use only for limited timespans and replace often.
- **D** = **Severe Effect** -- The chemical has a severe adverse affect on the product and will likely destroy it. Not reccomended for use.
- N/A = No Data Available -- One or more of the materials in the product has an unknown compatibility with the chemical.

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

Chemical Substance	Rating	Chemical Substance	Rating
Acetamide	A	Barium Chloride	A
Acetic Acid	D	Barium Hydroxide	A
Acetic Acid 20%	D	Barium Nitrate	A
Acetic Acid 20%	D	Barium Sulfate	N/A
	B	Beer	
Acetic Acid, Glacial	D	200	A
Acetic Anhydride		Benzaldehyde	D
Acetone	D B	Benzene Benzoic Acid	С
Acetyl Chloride (dry)			D
Acetylene	N/A	Benzol	D
Alcohols: Amyl	A	Bromine	D
Alcohols: Butyl	D	Butadiene	C
Alcohols: Ethyl	A	Butane	С
Alcohols: Isopropyl	D	Butanol (Butyl Alcohol)	В
Alcohols: Methyl	В	Buttermilk	В
Aluminum Chloride 20%	D	Butyl Amine	D
Aluminum Hydroxide	N/A	Butyl acetate	D
Aluminum Nitrate	N/A	Butyric Acid	N/A
Aluminum Potassium Sulfate 10%	D	Calcium Bisulfite	С
Aluminum Potassium Sulfate 100%	D	Calcium Carbonate	A
Aluminum Sulfate	A	Calcium Hydroxide	А
Amines	D	Calcium Hypochlorite	D
Ammonia 10%	D	Calcium Nitrate	A
Ammonia, anhydrous	D	Calcium Sulfate	D
Ammonia, liquid	D	Carbolic Acid (Phenol)	D
Ammonium Chloride	N/A	Carbon Disulfide	В
Ammonium Hydroxide	A	Carbon Tetrachloride	D
Ammonium Phosphate, Dibasic	N/A	Carbonic Acid	А
Ammonium Sulfate	N/A	Chlorine (dry)	D
Amyl Acetate	D	Chlorine Water	N/A
Amyl Alcohol	А	Chlorine, Anhydrous Liquid	N/A
Aniline	С	Chloroacetic Acid	D
Aqua Regia (80% HCl, 20% HNO3)	N/A	Chlorobenzene (Mono)	D
Arsenic Acid	C	Chloroform	D
Asphalt	В	Chlorosulfonic Acid	D

The information in this chart has been compiled from several sources and as such Pneuline makes no guarantee as to the accuracy or completeness of the information. This chart is ONLY to be used as a guide in selecting the appropriate product for a particular use case. A product's resistance to chemical exposure will vary based on a variety of factors including: temprature, exposure time, quantity, concentration, and purity of chemicals, presense or absence of catalyzing agents, and pressure. Ratings listed in this chart apply for a limited exposure time (normally 48 hours) and as such Pneuline offers NO warranty (express or implied) that a particular product will perform adequately in a given environment.

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

Chemical Substance	Rating	Chemical Substance	Rating N/A
Chromic Acid 10%	D	Ferrous Chloride	N/A D
Chromic Acid 30% Chromic Acid 5%	D D	Ferrous Sulfate Fluorine	N/A
Chromic Acid 50%	D	Fluorosilicic Acid	N/A N/A
Chromic Acid 80%	D	Formaldehyde 100%	D
Cider	A	Formaldehyde 40%	D
Citric Acid	A	Formic Acid	N/A
Copper Cyanide	D	Fuel Oils	A
Copper Nitrate	N/A	Furfural (Furfuraldehyde)	N/A
Copper Sulfate (more than 5%)	D	Gasoline (high-aromatic)	A
Copper Sulfate 5%	D	Gasoline, leaded, ref.	A
Cresols	N/A	Gasoline, unleaded	A
Cresylic Acid	N/A	Glucose	A
Cyclohexane	A	Glycerin	A
Cyclohexanone	D	Heptane	C
Detergents	A	Hexane	C
Dichloroethane	В	Honey	Ă
Diesel Fuel	А	Hydrochloric Acid 100%	D
Diethylamine	А	Hydrochloric Acid 20%	D
Diethylene Glycol	А	Hydrochloric Acid 37%	D
Dimethyl Aniline	В	Hydrofluoric Acid 100%	N/A
Dimethyl Formamide	D	Hydrofluoric Acid 20%	N/A
Epsom Salts (Magnesium Sulfate)	A	Hydrofluoric Acid 50%	N/A
Ethanol	А	Hydrofluoric Acid 75%	N/A
Ethyl Acetate	D	Hydrogen Peroxide 10%	Ċ
Ethyl Chloride	А	Hydrogen Peroxide 100%	D
Ethylene Chloride	В	Hydrogen Peroxide 30%	D
Ethylene Chlorohydrin	D	Hydrogen Peroxide 50%	D
Ethylene Dichloride	С	Hydrogen Sulfide (aqua)	С
Ethylene Glycol	A	Isopropyl Acetate	В
Ethylene Oxide	D	Isopropyl Ether	С
Fatty Acids	N/A	Jet Fuel (JP3, JP4, JP5)	С
Ferric Chloride	Α	Kerosene	A
Ferric Nitrate	А	Ketones	D

The information in this chart has been compiled from several sources and as such Pneuline makes no guarantee as to the accuracy or completeness of the information. This chart is ONLY to be used as a guide in selecting the appropriate product for a particular use case. A product's resistance to chemical exposure will vary based on a variety of factors including: temprature, exposure time, quantity, concentration, and purity of chemicals, presense or absence of catalyzing agents, and pressure. Ratings listed in this chart apply for a limited exposure time (normally 48 hours) and as such Pneuline offers NO warranty (express or implied) that a particular product will perform adequately in a given environment.

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

Chemical Substance	Rating	Chemical Substance	Rating
Lacquer Thinners	D	Nitrobenzene	D
Lacquers	D	Nitromethane	D
Lactic Acid	В	Oils: Citric	А
Lard	А	Oils: Fuel Oil (1, 2, 3, 5A, 5B, 6)	А
Lead Sulfamate	В	Oils: Mineral	А
Lubricants	В	Oils: Olive	А
Lye: Ca(OH)2 Calcium Hydroxide	А	Oils: Pine	А
Lye: KOH Potassium Hydroxide	С	Ozone	D
Lye: NaOH Sodium Hydroxide	А	Paraffin	А
Magnesium Chloride	А	Pentane	С
Magnesium Hydroxide	N/A	Perchloroethylene	С
Magnesium Nitrate	А	Phenol (10%)	D
Magnesium Sulfate (Epsom Salts)	А	Phenol (Carbolic Acid)	D
Mercuric Chloride (dilute)	N/A	Phosphoric Acid (more than 40%)	С
Mercury	N/A	Phosphoric Acid (crude)	В
Methanol (Methyl Alcohol)	В	Phosphoric Acid (less than 40%)	С
Methyl Acetate	D	Photographic Solutions	Α
Methyl Alcohol 10%	В	Picric Acid	С
Methyl Butyl Ketone	D	Potassium Bromide	Α
Methyl Cellosolve	D	Potassium Chlorate	С
Methyl Chloride	В	Potassium Chloride	Α
Methyl Ethyl Ketone	D	Potassium Dichromate	В
Methylene Chloride	С	Potassium Hydroxide (Caustic Potash)	С
Milk	А	Potassium Nitrate	В
Mineral Spirits	В	Potassium Permanganate	D
Motor oil	А	Potassium Sulfate	A
Mustard	A	Propane (liquefied)	В
Naphtha	А	Propylene Glycol	A
Nickel Chloride	С	Pyridine	D
Nickel Nitrate	А	Salicylic Acid	A
Nickel Sulfate	A	Sea Water	N/A
Nitric Acid (20%)	N/A	Silicone	С
Nitric Acid (50%)	D	Silver Nitrate	А
Nitric Acid (5-10%)	N/A	Soap Solutions	А
Nitric Acid (Concentrated)	D	Soda Ash (see Sodium Carbonate)	В

The information in this chart has been compiled from several sources and as such Pneuline makes no guarantee as to the accuracy or completeness of the information. This chart is ONLY to be used as a guide in selecting the appropriate product for a particular use case. A product's resistance to chemical exposure will vary based on a variety of factors including: temprature, exposure time, quantity, concentration, and purity of chemicals, presense or absence of catalyzing agents, and pressure. Ratings listed in this chart apply for a limited exposure time (normally 48 hours) and as such Pneuline offers NO warranty (express or implied) that a particular product will perform adequately in a given environment.

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

Sodium AcetateDXyleneASodium BisulfateAZinc ChlorideASodium BisulfateCZinc SulfateASodium CarbonateBSodium CarbonateBSodium ChlorateDSodium ChlorateSodium ChlorateSodium Hydroxide (20%)BSodium Hydroxide (80%)CSodium Hydroxide (80%)CSodium Hydroxide (80%)CSodium SulfateASodium SulfateASolfur Dixide (dry)BSulfuric Acid (10-75%)DSulfuric Acid (10-75%)DTannic AcidToluene (Toluol)Toluene (Toluol)BTomato JuiceAVinegarCWater, Acid, MineAWater, SaltAWater, SaltAWater, SaltAWater, SaltAWater, SaltAAWater, SaltAAWater, SaltAWater, SaltAWater, SaltAWater, SaltAWater, SaltAWater, SaltAWater, SaltASulfure SaltASulfure SaltASulfure Salt	Chemical Substance	Rating	Chemical Substance	Rating
Sodium BicarbonateAZinc ChlorideASodium BisulfiteCSodium SisulfiteCSodium CarbonateBSodium ChlorateDSodium ChlorideN/ASodium Hydroxide (20%)BSodium Hydroxide (80%)CSodium Hydroxide (80%)CSodium SulfiteASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium Thiosulfate (hypo)BStannic ChlorideN/AStodiard SolventASulfur Dioxide (10r)BStannic AcidN/AStolfur Dioxide (10r)BSulfuric Acid (10-75%)DTannic AcidCTurpentineBUreaAVinegarCWater, Acid, MineAWater, SaltAWater, SaltA		-		
Sodium BisulfateAZinc SulfateASodium CarbonateBSodium ChlorateDSodium ChlorateDSodium ChlorateN/ASodium Hydroxide (20%)BSodium Hydroxide (20%)CSodium Hydroxide (80%)CSodium Hydroxide (80%)CSodium SulfateASodium SulfateASulfuric AcidCSulfuric Acid (less than 10%)CSulfuric AcidCTetrahydrofuranDToluene (Toluol)BTomato JuiceAVinegarCWater, Acid, MineAWater, SaitAWater, SaitA				
Sodium BisulfiteCSodium CarbonateBSodium ChlorateDSodium ChlorideN/ASodium Hydroxide (20%)BSodium Hydroxide (80%)CSodium Hydroxide (80%)CSodium Hypochlorite (less than 20%)DSodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium SulfateASulfur ChorideBStannic ChlorideBStataric AcidN/ASulfur Dioxide (dry)BSulfuric Acid (los than 10%)CSulfuric Acid (los than 10%)CTannic AcidCTetrachloroethyleneBTetrachloroethyleneBToluene (Toluol)BTomato JuiceAVinegarCWater, Acid, MineAWater, SaltAWater, FreshA	Sodium Bisulfate			
Sodium CarbonateBSodium ChlorateDSodium ChlorateN/ASodium Hydroxide (20%)BSodium Hydroxide (50%)CSodium Hydroxide (80%)CSodium Hydroxide (80%)DSodium Hypochlorite (less than 20%)DSodium SulfateASodium SulfateASodium SulfateASodium SulfateBStannic ChlorideBStannic ChlorideBStarinc ChlorideBStarinc ChlorideBSulfuric Acid (less than 10%)CSulfuric Acid (10-75%)DTannic AcidCTetrahydrofuranDToluene (Toluol)BTorneto JuiceAVinegarCWater, DistilledAWater, FreshAWater, SaltA				
Sodium ChlorateDSodium ChlorideN/ASodium Hydroxide (20%)BSodium Hydroxide (50%)CSodium Hypochlorite (less than 20%)DSodium PeroxideASodium SulfateASodium Thiosulfate (hypo)BStanic ChlorideBStaric AcidN/AStdiur Thiosulfate (hypo)BStanic ChlorideBStaric AcidN/AStdiuri Chioride (dry)BSulfuri Acid (loss than 10%)CSulfuri Acid (loss than 10%)CTarnic AcidCTetrahydrofuranDToluene (Toluol)BTornato JuiceAVinegarCWater, Acid, MineAWater, FreshAWater, FreshAWater, SaltA				
Sodium ChlorideN/ASodium Hydroxide (20%)BSodium Hydroxide (80%)CSodium Hydroxide (80%)CSodium Hydroxide (80%)DSodium Hydroxide (80%)DSodium Sulfate (80%)ASodium SulfateASodium SulfateASodium Sulfate (hypo)BStanic ChlorideBStanic ChlorideASulfur Dioxide (dry)BSulfuric Acid (10-75%)DTarnic AcidCTetrahydrofuranDToluene (Toluol)BTornato JuiceATrichloroethaneCTurpentineBUreaAWater, Acid, MineAWater, FreshAWater, SaltA				
Sodium Hydroxide (20%)BSodium Hydroxide (50%)CSodium Hydroxide (80%)CSodium Hydroxide (80%)DSodium PeroxideASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium Sulfate (hypo)BStarnic ChlorideBStearic AcidN/AStoddard SolventASulfur Dioxide (dry)BSulfuric Acid (10-75%)DTannic AcidCTetrachloroethyleneBTotuene (Toluol)BTornato JuiceATirchloroethaneCTurpentineBUreaAWater, Acid, MineAWater, FreshAWater, SaltA				
Sodium Hydroxide (50%)CSodium Hydroxide (80%)CSodium Hypochlorite (less than 20%)DSodium PeroxideASodium SulfateASodium SulfateASodium Thiosulfate (hypo)BStannic ChlorideBStearic AcidN/AStoddard SolventASulfur Dioxide (dry)BSulfuric Acid (less than 10%)CSulfuric Acid (10-75%)DTannic AcidCTetrachloroethyleneBTetrachloroethyleneBToluene (Toluol)BUreaAVinegarCWater, Acid, MineAWater, FreshAWater, SaltA				
Sodium Hydroxide (80%)CSodium Hydroxide (less than 20%)DSodium PeroxideASodium SulfateASodium SulfateASodium Thiosulfate (hypo)BStanic ChlorideBStearic AcidN/AStoddard SolventASulfuri CAcid (less than 10%)CSulfuric Acid (10-75%)DTannic AcidCTetrachloroethyleneBTetrachloroethyleneBTomato JuiceATrichloroethaneCTurpentineBUreaAVinegarCWater, Acid, MineAWater, SaltAWater, SaltA				
Sodium Hypochlorite (less than 20%)DSodium PeroxideASodium SulfateASodium SulfateASodium Thiosulfate (hypo)BStannic ChlorideBStanic ChlorideAStddard SolventASulfur Dioxide (dry)BSulfuric Acid (less than 10%)CSulfuric Acid (10-75%)DTannic AcidCTetrachloroethyleneBTetrahydrofuranDToluene (Toluol)BTornato JuiceAVinegarCWater, Acid, MineAWater, FreshAWater, SaltA				
Sodium PeroxideASodium SulfateASodium SulfideASodium Thiosulfate (hypo)BStannic ChlorideBStearic AcidN/AStoddard SolventASulfur Dioxide (dry)BSulfuric Acid (less than 10%)CSulfuric Acid (10-75%)DTannic AcidCTetrahydrofuranDToluene (Toluol)BTomato JuiceATrichloroethnaneCTurpentineBUreaAVinegarCWater, Acid, MineAWater, SaltA				
Sodium SulfateASodium SulfideASodium Thiosulfate (hypo)BStannic ChlorideBStearic AcidN/AStoddard SolventASulfur Dioxide (dry)BSulfuric Acid (less than 10%)CSulfuric Acid (10-75%)DTannic AcidCTetrachloroethyleneBTetrachloroethyleneBToluene (Toluol)BTonato JuiceAVinegarCWater, Acid, MineAWater, FreshAWater, SaltA				
Sodium SulfideASodium Thiosulfate (hypo)BStannic ChlorideBStearic AcidN/AStoddard SolventASulfur Dioxide (dry)BSulfuric Acid (less than 10%)CSulfuric Acid (10-75%)DTannic AcidCTetrachloroethyleneBTetrachloroethyleneBToluene (Toluol)BTonato JuiceAVinegarCWater, Acid, MineAWater, FreshAWater, SaltA				
Sodium Thiosulfate (hypo)BStannic ChlorideBStearic AcidN/AStoddard SolventASulfur Dioxide (dry)BSulfuric Acid (less than 10%)CSulfuric Acid (10-75%)DTannic AcidCTetrachloroethyleneBToluene (Toluol)BTomato JuiceATrichloroethaneCTurpentineBUreaAWater, Acid, MineAWater, FreshAWater, SaltA				
Stannic ChlorideBStearic AcidN/AStoddard SolventASulfur Dioxide (dry)BSulfuric Acid (less than 10%)CSulfuric Acid (10-75%)DTannic AcidCTetrachloroethyleneBTetrahydrofuranDToluene (Toluol)BTrichloroethaneCTurpentineBUreaAVinegarCWater, Acid, MineAWater, FreshAWater, SaltA				
Stearic AcidN/AStoddard SolventASulfur Dioxide (dry)BSulfuric Acid (less than 10%)CSulfuric Acid (10-75%)DTannic AcidCTetrachloroethyleneBTetrachloroethyleneDToluene (Toluol)BTomato JuiceATrichloroethaneCTurpentineBUreaAVinegarCWater, Acid, MineAWater, FreshAWater, SaltA				
Stoddard SolventASulfur Dioxide (dry)BSulfuric Acid (less than 10%)CSulfuric Acid (10-75%)DTannic AcidCTetrachloroethyleneBTetrahydrofuranDToluene (Toluol)BTomato JuiceATrichloroethaneCTurpentineBUreaAVinegarCWater, Acid, MineAWater, FreshAWater, SaltA		—		
Sulfur Dioxide (dry)BSulfuric Acid (less than 10%)CSulfuric Acid (10-75%)DTannic AcidCTetrachloroethyleneBTetrachloroethyleneDToluene (Toluol)BTomato JuiceATrichloroethaneCTurpentineBUreaAVinegarCWater, Acid, MineAWater, FreshAWater, SaltA				
Sulfuric Acid (less than 10%)CSulfuric Acid (10-75%)DTannic AcidCTetrachloroethyleneBTetrahydrofuranDToluene (Toluol)BTomato JuiceATrichloroethaneCTurpentineBUreaAVinegarCWater, Acid, MineAWater, FreshAWater, SaltA				
Sulfuric Acid (10-75%)DTannic AcidCTetrachloroethyleneBTetrahydrofuranDToluene (Toluol)BTomato JuiceATrichloroethaneCTurpentineBUreaAVinegarCWater, Acid, MineAWater, FreshAWater, SaltA				
Tannic AcidCTetrachloroethyleneBTetrahydrofuranDToluene (Toluol)BTomato JuiceATrichloroethaneCTurpentineBUreaAVinegarCWater, Acid, MineAWater, DistilledAWater, FreshAWater, SaltA		-		
TetrachloroethyleneBTetrahydrofuranDToluene (Toluol)BTomato JuiceATrichloroethaneCTurpentineBUreaAVinegarCWater, Acid, MineAWater, DistilledAWater, FreshAWater, SaltA	· · · · · · · · · · · · · · · · · · ·			
TetrahydrofuranDToluene (Toluol)BTomato JuiceATrichloroethaneCTurpentineBUreaAVinegarCWater, Acid, MineAWater, DistilledAWater, FreshAWater, SaltA				
Toluene (Toluol)BTomato JuiceATrichloroethaneCTurpentineBUreaAVinegarCWater, Acid, MineAWater, DistilledAWater, FreshAWater, SaltA				
Tomato JuiceATrichloroethaneCTurpentineBUreaAVinegarCWater, Acid, MineAWater, DistilledAWater, FreshAWater, SaltA				
TrichloroethaneCTurpentineBUreaAVinegarCWater, Acid, MineAWater, DistilledAWater, FreshAWater, SaltA				
TurpentineBUreaAVinegarCWater, Acid, MineAWater, DistilledAWater, FreshAWater, SaltA				
UreaAVinegarCWater, Acid, MineAWater, DistilledAWater, FreshAWater, SaltA				
VinegarCWater, Acid, MineAWater, DistilledAWater, FreshAWater, SaltA				
Water, Acid, MineAWater, DistilledAWater, FreshAWater, SaltA	Vinegar			
Water, DistilledAWater, FreshAWater, SaltA				
Water, Fresh A Water, Salt A				
Water, Salt A				
	-			

The information in this chart has been compiled from several sources and as such Pneuline makes no guarantee as to the accuracy or completeness of the information. This chart is ONLY to be used as a guide in selecting the appropriate product for a particular use case. A product's resistance to chemical exposure will vary based on a variety of factors including: temprature, exposure time, quantity, concentration, and purity of chemicals, presense or absence of catalyzing agents, and pressure. Ratings listed in this chart apply for a limited exposure time (normally 48 hours) and as such Pneuline offers NO warranty (express or implied) that a particular product will perform adequately in a given environment.

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

Chemical Compatibility Disclaimer

The information in this chart has been compiled from several sources (listed below) and as such Pneuline makes no guarantee as to the accuracy or completeness of the information. This chart is ONLY to be used as a guide in selecting the appropriate product for a particular use case. A product's resistance to chemical exposure will vary based on a variety of factors including: temprature, exposure time, quantity, concentration, the purity of the chemicals involved, presense or absence of catalyzing agents, and pressure. Ratings listed in this chart apply for a limited exposure time (normally 48 hours) and as such Pneuline offers NO warranty (express or implied) that a particular product will perform adequately in a given environment.

Sources

https://www.plasticsintl.com/chemical-resistance-chart https://www.astisensor.com/KYNAR_PVDF_Chemical_Compatibility_Resistance_Chart.pdf https://www.ipexna.com/media/12311/chemical-guide-us-ipex-pvdf.pdf https://www.polyfluor.nl/en/chemical-resistance/pvdf/ https://www.fhr.com/KochFHR/media/Polyproylenes-unrestricted/PP%20Random%20Copolymers/P5M6K-080.pdf https://mykin.com/rubber-chemical-resistance-chart https://www.calpaclab.com/nylon-chemical-compatibility-chart/ https://www.calpaclab.com/acetal-polyoxymethylene-chemical-compatibility-chart/ https://www.calpaclab.com/polycarbonate-chemical-compatibility-chart/ https://www.calpaclab.com/polycarbonate-chemical-resistance/pvdf/ https://www.calpaclab.com/polypropylene-chemical-compatibility-chart/ https://www.calpaclab.com/polypropylene-chemical-compatibility-chart/ https://www.calpaclab.com/polypropylene-chemical-compatibility-chart/ https://www.calpaclab.com/polypropylene-chemical-compatibility-chart/

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

