

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

Product Series: Product Type: Housing Material: Diaphragm Material: Inlet: **Outlet:** Max Operating Temp: 266.00°F / 130.00°C Min Operating Temp: 14.00°F / -10.00°C **Product SKU:**


MPVC Inline Check Valve Cleanroom Polypropylene 0.030" Viton Natural Polypropylene P5M6K Natural Polypropylene P5M6K 001010401

Physical Properties

Size and Weight: 1.690 Long 0.750 Wide, 1.92g Max Operating Tensile Stress: 10 lbs Max Allowable Leak Rate: 0.009 cm^3/sec @ 65 psi (air) Max Operating Pressure: 65 psi (air) 0.0 psi (Normally Open) Cracking Pressure: Required Sealing Back Pressure: Less than 0.1 psi (air)

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greelev, CO 80631

Flow Rate (Gpm) vs. Test Pressure (Psi)

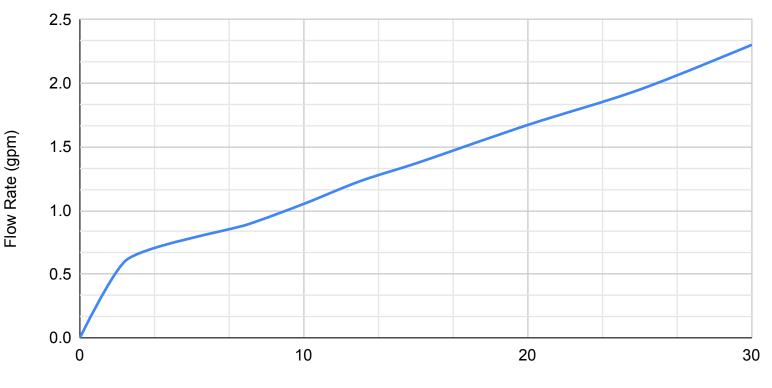

Test Pressure (psi)

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

Chemical Compatibility Information

Inline diagphram type check valves, all types of filters, self-sealing check valves, ball type check valves, and spring loaded check valves are all products that can, and typically do, contain multiple types of different materials. The chemical compatibility of the whole product is limited to those chemicals which are compatible with all of the materials present in the product. Pneuline has compiled an extensive list of various chemical compatibility ratings for the different materials that we use to manufacture our products, and have provided a list of chemical compatibility ratings for each specific product based on the materials used in that product.

The rating system is as follows:

- **A = Excellent** -- The product is fully compatible with the chemical and is recommended for continuous use within the normal operating parameters of the product (temprature, pressure, etc).
- **B** = **Adequate** -- The chemical causes a minor effect to the product, slight corrosion or discoloration, minor loss in performance or slightly shortened operating lifespan.
- **C** = **Not Ideal** -- The chemical has a pronounced effect on the product and will degrade it. Material softening, swelling, loss of strength, corrosion, and discoloration may occur. Use only for limited timespans and replace often.
- **D** = **Severe Effect** -- The chemical has a severe adverse affect on the product and will likely destroy it. Not reccomended for use.
- N/A = No Data Available -- One or more of the materials in the product has an unknown compatibility with the chemical.

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

> Pneuline Supply, Inc. DATA SHEET

MPVC-3B-P5V

Chemical Substance	Rating	Chemical Substance	Rating
Acetaldehyde	D	Barium Carbonate	C
Acetamide	С	Barium Chloride	А
Acetic Acid	В	Barium Hydroxide	В
Acetic Acid 20%	А	Barium Nitrate	С
Acetic Acid 80%	А	Barium Sulfate	В
Acetic Acid, Glacial	В	Beer	А
Acetic Anhydride	D	Benzaldehyde	D
Acetone	D	Benzene	D
Acetyl Chloride (dry)	D	Benzoic Acid	В
Acetylene	А	Benzol	В
Alcohols: Amyl	В	Bromine	D
Alcohols: Butyl	А	Butadiene	С
Alcohols: Ethyl	С	Butane	А
Alcohols: Isopropyl	А	Butanol (Butyl Alcohol)	А
Alcohols: Methyl	D	Buttermilk	А
Aluminum Chloride 20%	А	Butyl Amine	D
Aluminum Hydroxide	В	Butyl acetate	D
Aluminum Nitrate	Α	Butyric Acid	В
Aluminum Potassium Sulfate 10%	С	Calcium Bisulfite	В
Aluminum Potassium Sulfate 100%	С	Calcium Carbonate	А
Aluminum Sulfate	Α	Calcium Hydroxide	А
Amines	D	Calcium Hypochlorite	А
Ammonia 10%	D	Calcium Nitrate	А
Ammonia, anhydrous	D	Calcium Sulfate	С
Ammonia, liquid	D	Carbolic Acid (Phenol)	В
Ammonium Chloride	А	Carbon Disulfide	D
Ammonium Hydroxide	С	Carbon Tetrachloride	D
Ammonium Phosphate, Dibasic	D	Carbonic Acid	А
Ammonium Sulfate	D	Chlorine (dry)	D
Amyl Acetate	D	Chlorine Water	D
Amyl Alcohol	В	Chlorine, Anhydrous Liquid	N/A
Aniline	С	Chloroacetic Acid	D
Aqua Regia (80% HCl, 20% HNO3)	В	Chlorobenzene (Mono)	С
Arsenic Acid	Α	Chloroform	С
Asphalt	В	Chlorosulfonic Acid	D

The information in this chart has been compiled from several sources and as such Pneuline makes no guarantee as to the accuracy or completeness of the information. This chart is ONLY to be used as a guide in selecting the appropriate product for a particular use case. A product's resistance to chemical exposure will vary based on a variety of factors including: temprature, exposure time, quantity, concentration, and purity of chemicals, presense or absence of catalyzing agents, and pressure. Ratings listed in this chart apply for a limited exposure time (normally 48 hours) and as such Pneuline offers NO warranty (express or implied) that a particular product will perform adequately in a given environment.

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

Pneuline Supply, Inc. DATA SHEET

MPVC-3B-P5V

Chemical Substance	Rating	Chemical Substance	Rating
Chocolate Syrup	A	Ferric Sulfate	A
Chromic Acid 10%	D	Ferrous Chloride	N/A
Chromic Acid 30%	D	Ferrous Sulfate	C
Chromic Acid 5%	D	Fluorine	D
Chromic Acid 50%	D	Fluorosilicic Acid	В
Chromic Acid 80%	D	Formaldehyde 100%	D
Cider	А	Formaldehyde 40%	D
Citric Acid	А	Formic Acid	D
Copper Cyanide	А	Fuel Oils	А
Copper Nitrate	А	Furfural (Furfuraldehyde)	D
Copper Sulfate (more than 5%)	А	Gasoline (high-aromatic)	А
Copper Sulfate 5%	А	Gasoline, leaded, ref.	В
Cresols	D	Gasoline, unleaded	С
Cresylic Acid	А	Glucose	А
Cyclohexane	D	Glycerin	А
Cyclohexanone	D	Heptane	С
Detergents	А	Hexane	В
Dichloroethane	D	Honey	А
Diesel Fuel	А	Hydrochloric Acid 100%	С
Diethylamine	D	Hydrochloric Acid 20%	В
Diethylene Glycol	А	Hydrochloric Acid 37%	С
Dimethyl Aniline	D	Hydrofluoric Acid 100%	С
Dimethyl Formamide	D	Hydrofluoric Acid 20%	С
Epsom Salts (Magnesium Sulfate)	А	Hydrofluoric Acid 50%	С
Ethanol	С	Hydrofluoric Acid 75%	С
Ethyl Acetate	D	Hydrogen Peroxide 10%	А
Ethyl Chloride	D	Hydrogen Peroxide 100%	В
Ethylene Chloride	С	Hydrogen Peroxide 30%	В
Ethylene Chlorohydrin	D	Hydrogen Peroxide 50%	В
Ethylene Dichloride	D	Hydrogen Sulfide (aqua)	D
Ethylene Glycol	А	Isopropyl Acetate	D
Ethylene Oxide	D	Isopropyl Ether	D
Fatty Acids	A	Jet Fuel (JP3, JP4, JP5)	А
Ferric Chloride	A	Kerosene	В
Ferric Nitrate	А	Ketones	D

The information in this chart has been compiled from several sources and as such Pneuline makes no guarantee as to the accuracy or completeness of the information. This chart is ONLY to be used as a guide in selecting the appropriate product for a particular use case. A product's resistance to chemical exposure will vary based on a variety of factors including: temprature, exposure time, quantity, concentration, and purity of chemicals, presense or absence of catalyzing agents, and pressure. Ratings listed in this chart apply for a limited exposure time (normally 48 hours) and as such Pneuline offers NO warranty (express or implied) that a particular product will perform adequately in a given environment.

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

Pneuline Supply, Inc. DATA SHEET

MPVC-3B-P5V

Chemical Substance	Rating	Chemical Substance	Rating
Lacquer Thinners	D	Nitrobenzene	В
Lacquers	D	Nitromethane	D
Lactic Acid	В	Oils: Citric	А
Lard	В	Oils: Fuel Oil (1, 2, 3, 5A, 5B, 6)	В
Lead Sulfamate	А	Oils: Mineral	А
Lubricants	А	Oils: Olive	А
Lye: Ca(OH)2 Calcium Hydroxide	А	Oils: Pine	В
Lye: KOH Potassium Hydroxide	D	Ozone	В
Lye: NaOH Sodium Hydroxide	С	Paraffin	А
Magnesium Chloride	А	Pentane	D
Magnesium Hydroxide	А	Perchloroethylene	D
Magnesium Nitrate	А	Phenol (10%)	В
Magnesium Sulfate (Epsom Salts)	А	Phenol (Carbolic Acid)	В
Mercuric Chloride (dilute)	В	Phosphoric Acid (more than 40%)	А
Mercury	В	Phosphoric Acid (crude)	В
Methanol (Methyl Alcohol)	D	Phosphoric Acid (less than 40%)	Α
Methyl Acetate	D	Photographic Solutions	Α
Methyl Alcohol 10%	D	Picric Acid	В
Methyl Butyl Ketone	D	Potassium Bromide	С
Methyl Cellosolve	D	Potassium Chlorate	С
Methyl Chloride	D	Potassium Chloride	Α
Methyl Ethyl Ketone	D	Potassium Dichromate	Α
Methylene Chloride	В	Potassium Hydroxide (Caustic Potash)	D
Milk	В	Potassium Nitrate	А
Mineral Spirits	В	Potassium Permanganate	С
Motor oil	А	Potassium Sulfate	А
Mustard	В	Propane (liquefied)	A
Naphtha	В	Propylene Glycol	С
Nickel Chloride	А	Pyridine	D
Nickel Nitrate	С	Salicylic Acid	А
Nickel Sulfate	А	Sea Water	Α
Nitric Acid (20%)	А	Silicone	А
Nitric Acid (50%)	С	Silver Nitrate	А
Nitric Acid (5-10%)	A	Soap Solutions	A
Nitric Acid (Concentrated)	D	Soda Ash (see Sodium Carbonate)	А

The information in this chart has been compiled from several sources and as such Pneuline makes no guarantee as to the accuracy or completeness of the information. This chart is ONLY to be used as a guide in selecting the appropriate product for a particular use case. A product's resistance to chemical exposure will vary based on a variety of factors including: temprature, exposure time, quantity, concentration, and purity of chemicals, presense or absence of catalyzing agents, and pressure. Ratings listed in this chart apply for a limited exposure time (normally 48 hours) and as such Pneuline offers NO warranty (express or implied) that a particular product will perform adequately in a given environment.

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

Pneuline Supply, Inc. DATA SHEET

MPVC-3B-P5V

Sodium AcetateDXyleneBSodium BisufateAZinc ChlorideASodium BisulfateAZinc SulfateASodium BisulfateAZinc SulfateASodium CarbonateASulfateASodium ChlorateCSodium ChlorideASodium ChlorideASodium Hydroxide (20%)BSodium Hydroxide (80%)CSodium Hydroxide (80%)CSodium Hydroxide (80%)CSodium Hydroxide (80%)CSodium Bypochlorite (less than 20%)ASodium PeroxideASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium Thiosulfate (hypo)AStannic ChlorideAStadium Chloride (4ry)USulfuric AcidN/ASulfateASulfuric Acid (10-75%)CTannic AcidTannic AcidTanic AcidATetrachloroethyleneDToluene (Toluol)CTomato JuiceBTurpentineDCTurpentineUreaACCVireaACVireaACVireaCCVireaCCVireaCCSolium SulfateCCSulfuric AcidCCSulfuric AcidCCSulfuric AcidCCSolium ChlorateCCSulfuric Acid<	Chemical Substance	Rating	Chemical Substance	Rating
Sodium BicarbonateAZinc ChlorideASodium BisulfateAZinc SulfateASodium BisulfateAZinc SulfateASodium CarbonateASodium ChlorateCSodium ChlorateCSodium Hydroxide (20%)BSodium Hydroxide (20%)BSodium Hydroxide (80%)CSodium Hydroxide (80%)CSodium Hydroxide (80%)CSodium BulfateASodium SulfateSodium SulfateSodium SulfateASodium Sulfate (hypo)ASodium Thiosulfate (hypo)AStannic ChlorideAStatinic ChlorideAStatinic ChlorideISulfuri Acid (less than 10%)ASulfuric Acid (10-75%)ISulfuric Acid (10-75%)CTannic AcidITantic AcidAIIToluene (Toluol)CIIToluene (Toluol)CIITurpentineDIITurpentineDIITurpentineDIITurpentineDIITurpentineDIITurpentineDIITurpentineDIITurpentineDITurpentineDITurpentineDITurpentineDITurpentineDITurpentineDITurpentineDITurpentine <td>Sodium Acetate</td> <td>D</td> <td>Xvlene</td> <td>В</td>	Sodium Acetate	D	Xvlene	В
Sodium BisulfateAZinc SulfateASodium BisulfateASodium CarbonateASodium ChlorateCSodium ChlorateCSodium Hydroxide (20%)BSodium Hydroxide (50%)CSodium Hydroxide (80%)CSodium Hydroxide (80%)CSodium BrenxideBSodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium Sulfate (hypo)AStannic ChlorideAStannic ChlorideAStodidard SolventCSulfuric Acid (10-75%)CTannic AcidATetrahydrofuranDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA	Sodium Bicarbonate			А
Sodium BisulfiteASodium CarbonateASodium ChlorateCSodium ChlorateASodium Hydroxide (20%)BSodium Hydroxide (50%)CSodium Hydroxide (80%)CSodium Hydroxide (80%)ASodium Hydroxide (80%)ASodium BroxideBSodium SulfateASodium SulfateASodium SulfateASodium Thiosulfate (hypo)AStanric ChlorideAStarric AcidN/AStodidard SolventCSulfuric Acid (less than 10%)ASulfuric Acid (10-75%)CTannic AcidATetrahydrofuranDToluene (Toluol)CTomato JuiceBTruppentineDUreaA		А		А
Sodium CarbonateASodium ChlorateCSodium ChlorideASodium Hydroxide (20%)BSodium Hydroxide (50%)CSodium Hydroxide (80%)CSodium Hydroxide (80%)CSodium PeroxideBSodium PeroxideASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium Sulfate (hypo)AStanic ChlorideAStearic AcidN/AStoddard SolventCSulfuri Acid (less than 10%)ASulfuric Acid (10-75%)CTannic AcidATetrahydrofuranDToluene (Toluol)CTomato JuiceBTrichloroethyleneCTurpentineDUreaA				
Sodium ChlorateCSodium ChlorateASodium Hydroxide (20%)BSodium Hydroxide (50%)CSodium Hydroxide (80%)CSodium Hydroxide (80%)CSodium Hydroxide (80%)ASodium Sulfate (less than 20%)ASodium SulfateASodium SulfateASodium SulfateASodium SulfateASodium Thiosulfate (hypo)AStanic ChlorideAStaric AcidN/AStoddard SolventCSulfuric Acid (10-75%)CTannic AcidATetrahydrofuranDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA		А		
Sodium ChlorideASodium Hydroxide (20%)BSodium Hydroxide (50%)CSodium Hypoxide (80%)CSodium Hypochlorite (less than 20%)ASodium SulfateBSodium SulfateASodium Sulfate (hypo)AStannic ChlorideAStaanic ChlorideAStaddard SolventCSulfuric Acid (less than 10%)ASulfuric Acid (10-75%)CTannic AcidATetrachloroethyleneDToluene (Toluol)CTonato JuiceBTrichloroethaneCTurpentineDUreaA				
Sodium Hydroxide (20%)BSodium Hydroxide (50%)CSodium Hydroxide (80%)CSodium Hypochlorite (less than 20%)ASodium PeroxideBSodium SulfateASodium SulfateASodium Thiosulfate (hypo)AStannic ChlorideAStadard SolventCSulfuric Acid (10-75%)CSulfuric Acid (10-75%)CTetrachloroethyleneDTetrachloroethyleneDToluene (Toluol)CTonato JuiceBTrichloroethaneCTurpentineDUreaA				
Sodium Hydroxide (50%)CSodium Hydroxide (80%)CSodium Hydroxide (80%)ASodium Hydroxide (less than 20%)ASodium SulfateASodium SulfateASodium SulfateASodium Thiosulfate (hypo)AStannic ChlorideAStearic AcidN/AStodiur Dioxide (dry)DSulfur Dioxide (less than 10%)ASulfuric Acid (10-75%)CTannic AcidATetrachloroethyleneDToluene (Toluol)CTonato JuiceBTrichloroethaneCUreaA				
Sodium Hydroxide (80%)CSodium Hypochlorite (less than 20%)ASodium PeroxideBSodium SulfateASodium SulfateASodium Thiosulfate (hypo)AStannic ChlorideAStearic AcidN/AStoddard SolventCSulfur Dioxide (dry)DSulfuric Acid (10-75%)CTannic AcidATetrachloroethyleneDTetrachloroethyleneDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA				
Sodium Hypochlorite (less than 20%)ASodium PeroxideBSodium SulfateASodium SulfideASodium Thiosulfate (hypo)AStannic ChlorideAStearic AcidN/AStoddard SolventCSulfur Dioxide (dry)DSulfuric Acid (less than 10%)ASulfuric Acid (10-75%)CTannic AcidATetrachloroethyleneDTetrachloroethyleneBToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA				
Sodium PeroxideBSodium SulfateASodium SulfideASodium Thiosulfate (hypo)AStannic ChlorideAStearic AcidN/AStoddard SolventCSulfur Dioxide (dry)DSulfuric Acid (less than 10%)ASulfuric Acid (10-75%)CTannic AcidATetrachloroethyleneDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA				
Sodium SulfateASodium SulfideASodium Thiosulfate (hypo)AStannic ChlorideAStearic AcidN/AStoddard SolventCSulfur Dioxide (dry)DSulfuric Acid (less than 10%)ASulfuric Acid (10-75%)CTannic AcidATetrachloroethyleneDTetrachloroethyleneDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA				
Sodium SulfideASodium Thiosulfate (hypo)AStannic ChlorideAStearic AcidN/AStoddard SolventCSulfur Dioxide (dry)DSulfuric Acid (less than 10%)ASulfuric Acid (10-75%)CTannic AcidATetrachloroethyleneDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA				
Sodium Thiosulfate (hypo)AStannic ChlorideAStearic AcidN/AStoddard SolventCSulfur Dioxide (dry)DSulfuric Acid (less than 10%)ASulfuric Acid (10-75%)CTannic AcidATetrachloroethyleneDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA				
Stannic ChlorideAStearic AcidN/AStoddard SolventCSulfur Dioxide (dry)DSulfuric Acid (less than 10%)ASulfuric Acid (10-75%)CTannic AcidATetrachloroethyleneDTetrahydrofuranDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA				
Stearic AcidN/AStoddard SolventCSulfur Dioxide (dry)DSulfuric Acid (less than 10%)ASulfuric Acid (10-75%)CTannic AcidATetrachloroethyleneDTetrahydrofuranDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA				
Stoddard SolventCSulfur Dioxide (dry)DSulfuric Acid (less than 10%)ASulfuric Acid (10-75%)CTannic AcidATetrachloroethyleneDTetrahydrofuranDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA				
Sulfur Dioxide (dry)DSulfuric Acid (less than 10%)ASulfuric Acid (10-75%)CTannic AcidATetrachloroethyleneDTetrahydrofuranDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA		-		
Sulfuric Acid (less than 10%)ASulfuric Acid (10-75%)CTannic AcidATetrachloroethyleneDTetrahydrofuranDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA				
Sulfuric Acid (10-75%)CTannic AcidATetrachloroethyleneDTetrahydrofuranDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA				
Tannic AcidATetrachloroethyleneDTetrahydrofuranDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA				
TetrachloroethyleneDTetrahydrofuranDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA	· · · · · ·			
TetrahydrofuranDToluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA				
Toluene (Toluol)CTomato JuiceBTrichloroethaneCTurpentineDUreaA	•			
Tomato JuiceBTrichloroethaneCTurpentineDUreaA				
TrichloroethaneCTurpentineDUreaA				
Turpentine D Urea A				
Urea A				
	Vinegar	C		
Water, Acid, Mine B	-			
Water, Distilled B				
Water, Fresh A				
Water, Salt A				
Whiskey and Wines A				

The information in this chart has been compiled from several sources and as such Pneuline makes no guarantee as to the accuracy or completeness of the information. This chart is ONLY to be used as a guide in selecting the appropriate product for a particular use case. A product's resistance to chemical exposure will vary based on a variety of factors including: temprature, exposure time, quantity, concentration, and purity of chemicals, presense or absence of catalyzing agents, and pressure. Ratings listed in this chart apply for a limited exposure time (normally 48 hours) and as such Pneuline offers NO warranty (express or implied) that a particular product will perform adequately in a given environment.

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

Chemical Compatibility Disclaimer

The information in this chart has been compiled from several sources (listed below) and as such Pneuline makes no guarantee as to the accuracy or completeness of the information. This chart is ONLY to be used as a guide in selecting the appropriate product for a particular use case. A product's resistance to chemical exposure will vary based on a variety of factors including: temprature, exposure time, quantity, concentration, the purity of the chemicals involved, presense or absence of catalyzing agents, and pressure. Ratings listed in this chart apply for a limited exposure time (normally 48 hours) and as such Pneuline offers NO warranty (express or implied) that a particular product will perform adequately in a given environment.

Sources

https://www.plasticsintl.com/chemical-resistance-chart https://www.astisensor.com/KYNAR_PVDF_Chemical_Compatibility_Resistance_Chart.pdf https://www.ipexna.com/media/12311/chemical-guide-us-ipex-pvdf.pdf https://www.polyfluor.nl/en/chemical-resistance/pvdf/ https://www.fhr.com/KochFHR/media/Polyproylenes-unrestricted/PP%20Random%20Copolymers/P5M6K-080.pdf https://mykin.com/rubber-chemical-resistance-chart https://www.calpaclab.com/nylon-chemical-compatibility-chart/ https://www.calpaclab.com/acetal-polyoxymethylene-chemical-compatibility-chart/ https://www.calpaclab.com/polycarbonate-chemical-compatibility-chart/ https://www.calpaclab.com/polycarbonate-chemical-compatibility-chart/ https://www.calpaclab.com/polypropylene-chemical-compatibility-chart/ https://www.calpaclab.com/polypropylene-chemical-compatibility-chart/ https://www.calpaclab.com/polypropylene-chemical-compatibility-chart/ https://www.calpaclab.com/polypropylene-chemical-compatibility-chart/

Pneuline Supply, Inc. 2881 S 31st Ave Unit 2A Greeley, CO 80631

